

# CS2-F FREQUENCY Meter

## DESCRIPTION

CS2-F Frequency Indicator has been designed with high accuracy measurement, display and communication of Frequency.

☑ The innovation feature is auto-range input from 0.01Hz~ 100KHz(option ~140KHz) and the display resolution will auto-change to show the highest according to input frequency.

They are also building in 4 Relay outputs, 3 External Control Inputs, 1 Analogue output and 1 RS485(Modbus RTU Mode) interface with versatile functions such as control, alarm, re-transmission and communication for a wide range of testing and machinery control applications.




## FEATURE

- Measuring Frequency AUTO RANGE 0.01~100KHz / ~140KHz(optional) / Voltage pulse or sine wave(specify).
- Accuracy:  $\pm 0.005\%$ ; Display range: 0~99999; Decimal Point auto moving according to input frequency
- 4 relay can be programmed individual to be a Hi / Lo / Hi Latch / Lo Latch / Go energized with Start Delay / Hysteresis / Energized & De-energized Delay functions, or to be a remote control.
- Analogue output and RS 485 communication port in option
- 3 external control inputs can be programmed individual to be Tare (Relative PV) / PV Hold / Maximum or Minimum Hold / DI (remote monitoring) / Reset for Relay Energized Latch....
- CE Approved & RoHS

## APPLICATIONS

- MCC panel, Machinery, Switch gear... for Frequency Measuring, Alarm and Remote I/O with PC/PLC
  - ☑ Fantastic 4 Relay functions as like as Hi / Lo / Hi latch / Lo latch / DO(Remote control by PC/PLC).
  - ☑ Flexible 3 DI functions as like as Reset for Relay energized and Remote monitoring by PC/PLC.
- Testing Equipments for Frequency Measuring, Alarm and Communication with PC/PLC
  - ☑ Flexible 3 DI functions as like as Maximum/Minimum hold, PV hold and Relative PV.
  - ☑ On line testing station for appliance, check points of PCB as so on.

## ORDERING INFORMATION

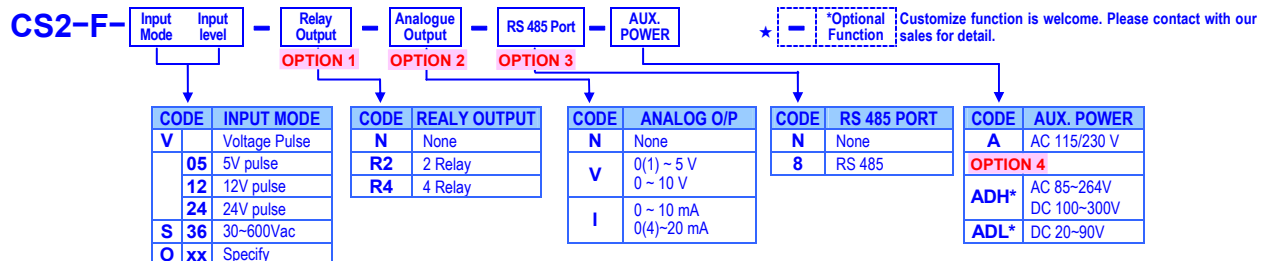

## TECHNICAL SPECIFICATION

Input		
Input Frequency	Input Mode	Input Level
0.01Hz ~ 50 Hz	Voltage Pulse	High Level: over 2/3 of input level
0.01Hz ~ 100KHz		Low Level: under 1/3 of input level
0.01Hz ~ 140KHz (option)	Sine Wave	

- Calibration:** Doesn't need calibration  
**Input range:** Auto range: 0.01Hz ~ 100KHz (~140KHz in option);  
**Accuracy:**  $\leq \pm 0.005\%$  of FS  $\pm 1C$ ;  
**Sampling time:** 15 cycles/sec( $\geq 15Hz$ );  
 f cycles/sec( $\leq 15Hz$ )  
**Response time:**  $\leq 100$  msec(when the **RuG** = "1")  
**Time out function:** Auto, Manual programmable, In manual mode, the period of time out can be set 0.0 sec~999.9sec

### Display & Functions

- LED:** Numeric: 5 digits, 0.8"(20.0mm)H red high-brightness LED  
 Relay output indication: 4 square red LED  
 RS 485 communication: 1 square orange LED  
 E.C.I. function indication: 3 square green LED  
 Max/Mini Hold indication: 2 square orange LED  
**Display range:** 0.0000~99999 with auto moving of decimal point  
**Resolution of PV:** Decimal point will Auto-changed according to input  
 Auto / Semi-Auto / Fix; 3 mode programmable

- Compensation factor:** Compensate error from 0.001~9.999  
**Over range indication:** **oofL**, when input is over 20% of input range Hi  
**Max / Mini recording:** Maxi & Mini Value of PV storage during power on.  
**Display functions:** PV / Max(Mini) Hold / RS 485 programmable  
**Front key functions:** Up and down key can be set to be a function as ECI.  
**Low cut:** Settable range: -19999~29999 counts  
**Digital fine adjust:** **PuPro**: Settable range: 0~+99999  
**PuSPn**: Settable range: 0~+99999

### Reading Stable Function

- Average:** Settable range: 1~99 times  
**Moving average:** Settable range: 1(None)~10 times  
**Digital filter:** Settable range: 0(None)/1~99 times

**Control Functions(option)**

<b>Set-points:</b>	Four set-points
<b>D.P. of set point:</b>	Programmable from 0 / 0.0 / 0.00 / 0.000 / 0.0000
<b>Control relay:</b>	Four relays Relay 2 & Relay 3: Dual FORM-C, 5A/230Vac, 10A/115V Relay 1 & Relay 4: Dual FORM-A, 1A/230Vac, 3A/115V
<b>Relay energized mode:</b>	Energized levels compare with set-points: Hi / Lo / Go.12 / Go.23 / Hi.HLd / Lo.HLd; programmable DO function: Energized by RS485 command of master.
<b>Energizing functions:</b>	Start delay / Energized & De-energized delay / Hysteresis / Energized Latch Start band(Minimum level for Energizing): 0~9999counts Start delay time: 0:00.0~9(Minutes):59.9(Second) Energized delay time: 0.00.0~9(Minutes):59.9(Second) De-energized delay time: 0.00.0~9(Minutes):59.9(Second) Hysteresis: 0~5000 counts

**External Control Inputs(ECI)**

<b>Input mode:</b>	3 ECI points, Contact or open collect input, Level trigger
<b>Functions:</b>	Relative PV(Tare) / PV Hold / Reset Max or Mini. Hold / DI / Reset for Relay Energized latch
<b>Debouncing time:</b>	Settable range 5 ~255 (x 8mseconds)

**Analogue output(option)**

<b>Accuracy:</b>	$\pm 0.1\%$ of F.S.; 16 bits DA converter
<b>Ripple:</b>	$\leq \pm 0.1\%$ of F.S.
<b>Response Time:</b>	$\leq 100$ msec. (10~90% of input)
<b>Isolation:</b>	AC 2.0 KV between input and output
<b>Output Range:</b>	Specify either Voltage or Current output in ordering Voltage: 0~5V / 0~10V / 1~5V programmable Current: 0~10mA / 0~20mA / 4~20mA programmable Voltage: 0~10V: $\geq 1000\Omega$ ; Current: 4(0)~20mA: $\leq 600\Omega$ max
<b>Output Capability:</b>	
<b>Functions:</b>	<b>R<sub>o</sub>HS</b> (output range high): Settable range: -19999~29999 <b>R<sub>o</sub>LS</b> (output range Low): Settable range: -19999~29999 <b>R<sub>o</sub>HL</b> (output High Limit): 0.00~110.00% of output High <b>R<sub>o</sub>PL</b> : Settable range: -38011~+27524 <b>R<sub>o</sub>SP</b> : Settable range: -38011~+27524
<b>Digital fine adjust:</b>	

**RS 485 Communication(option)**

<b>Protocol:</b>	Modbus RTU mode
<b>Baud Rate:</b>	1200/2400/4800/9600/19200/38400 programmable
<b>Data Bits:</b>	8 bits
<b>Parity:</b>	Even, odd or none (with 1 or 2 stop bit) programmable
<b>Address:</b>	1 ~ 255 programmable
<b>Remote Display:</b>	to show the value from RS485 command of master
<b>Distance:</b>	1200M
<b>Terminate Resistor:</b>	150 $\Omega$ at last unit.

**Electrical Safety**

<b>Dielectric Strength:</b>	AC 2.0 KV for 1 min, Between Power / Input / Output / Case
<b>Insulation Resistance:</b>	$\geq 100M$ ohm at 500Vdc, Between Power / Input / Output
<b>Isolation:</b>	Between Power / Input / Relay / Analogue / RS485 / E.C.I.
<b>EMC:</b>	EN 55011:2002; EN 61326:2003
<b>Safety(LVD):</b>	EN 61010-1:2001

**Environmental**



<b>Operating Temp.:</b>	0~60 °C
<b>Operating Humidity:</b>	20~95 %RH, Non-condensing
<b>Temp. Coefficient:</b>	$\leq 100$ PPM/°C
<b>Storage Temp.:</b>	-10~70 °C
<b>Enclosure:</b>	Front panel: IEC 529 (IP52); Housing: IP20
<b>Vibration Test:</b>	1~800 Hz, 3.175 g <sup>2</sup> /Hz

**Mechanical**



<b>Dimensions:</b>	96mm(W) x 48mm(H) x 120mm(D)
<b>Panel Cutout:</b>	92mm(W) x 44mm(H)
<b>Case Material:</b>	ABS fire-resistance (UL 94V-0)
<b>Mounting:</b>	Panel flush mounting
<b>Terminal Block:</b>	Plastic NYLON 66 (UL 94V-0) 10A 300Vac, M2.6, 1.3~2.0mm <sup>2</sup> (16~12AWG)
<b>Weight:</b>	550g / 350g(Aux. Power Code: ADH or ADL)

**Power**


<b>Power Supply:</b>	AC115/230V,50/60Hz; Optional: AC 85~264V / DC 100~300V or DC 20~56V
<b>Excitation Supply:</b>	DC12V, 24V/30mA maximum
<b>Power Consumption:</b>	5.0VA maximum
<b>Back Up Memory:</b>	By EEPROM

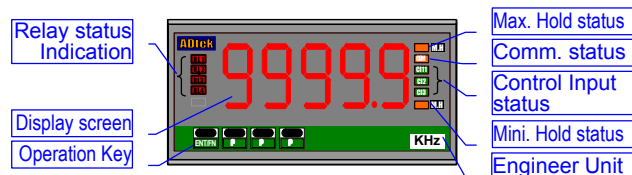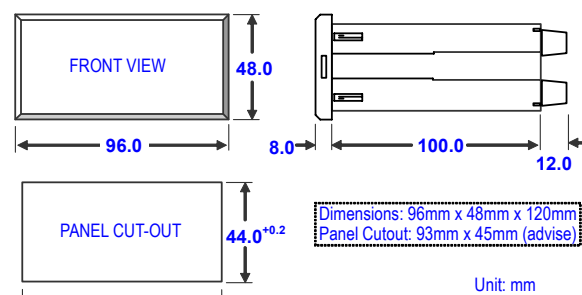**FRONT PANEL****DIMENSIONS****INSTALLATION**


The meter should be installed in a location that does not exceed the maximum operating temperature and provides good air circulation.

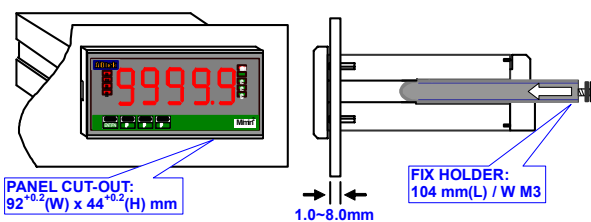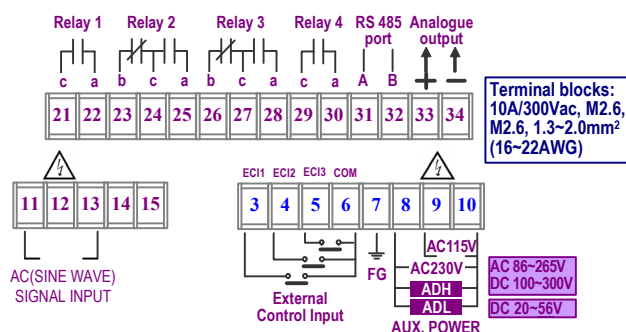**CONNECTION DIAGRAM**

Please check the voltage of power supplied first, and then connect to the specified terminals. It is recommended that power supplied to the meter be protected by a fuse or circuit breaker.

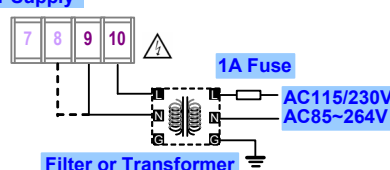**Power Supply**

**RS485 Communication Port**

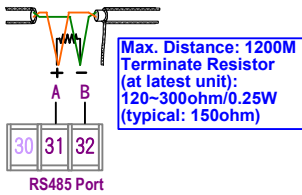

**FUNCTION DESCRIPTION**

**Input Functions**

**Input range:** Auto-Range: 0.01Hz~100.00KHz(option 140KHz),  
The meter has been designed very wide input auto-range from 0.01Hz~100.00KHz (Option: 0.01Hz~140.00KHz) that can cover almost any application for RPM, Linear Line Speed and Frequency. User doesn't need to specify the input range.

**Auto range display:** programmable between Auto Range / Semi-Auto Range / manual range, The description as below,

**Auto range [RUto]:** The decimal point will be auto changed according to the input frequency so that keep reading in the highest resolution.

**Semi-Auto range [SEn]:**  
The decimal point will be auto changed according to the input frequency to keep reading in the highest resolution under setting position of decimal point, according to the setting of decimal point. So, it's possible to show "overflow", if the input frequency is over the display range.

**Manual range [RnUL]:** The decimal point will be fixed by setting

**Time out of input:**

In the case of low frequency, the meter can not to identify that is low frequency and no input until the next pulse input. Sometimes, it takes a long period.

The meter builds in a time out function to cut out the reading to be "0".

There are two modes [RnUL] / [RUto] can be programmed.

**Manual [RnUL]:** There is a period named [teto] can be set from 0.0 sec ~ 999.9 sec. The reading will display "0", when the next pulse doesn't input during the setting time.

**Auto range [RUto]:** The reading will display "0", when the next pulse doesn't input during the time that gave by formula of meter's firmware.

**Period of time out:** Settable: 0.0 sec~999.9sec

If the time out mode [teto] set to be [RnUL], it will be show out.

**Display & Functions**

**Max / Mini recording:** The meter will storage the maximum and minimum value in [User Level] during power on in order to review drifting of PV


**Display functions:** PV / Max(Mini) Hold / RS 485 programmable in [dSPLY] function of [mPUt GrOUP]

**Present Value [Pu]:** The display will show the value that Relative to Input signal.

**Maximum Hold [RnHd] / Minimum Hold [RnHD]:**

The meter will keep display in maximum(minimum) value during power on, until manual reset by front key in [User Level], rear terminal is close [External Control Input(E.C.I.)] or press front down or up key to reset (according to setting, please functions of refer to the ECI Group)

▶ Please find the [ML] sticker that enclosure the package of the meter to stick on the right side of square orange LED

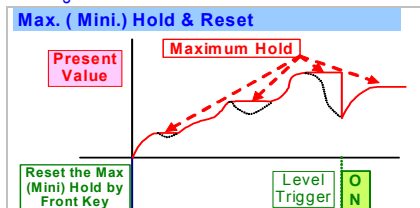


**Remote Display by RS485 command [5485]:**

The meter will show the value that received from RS485 sending. In past, The meter normally receive 4~20mA or 0~10V from AO or digital output from BCD module of PLC. We support a new solution that PV shows the value from RS485 command of master can so that can be **save cost and wiring** from PLC.

**PV Hold [PuHLd]:**


[External Control Input(E.C.I.)] can be set to be [PuHLd] function(Please refer to the function of ECI Group). The display will be hold, when the E.C.I. is closed.

▶ Please find the [ECI] sticker to stick on the right side of square green LED.

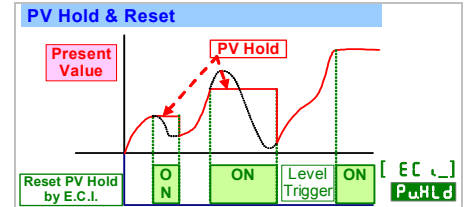


**Low cut:**

If the setting value is positive, it means when the absolutely value of PV ≤ Setting value, the display will be 0. If the setting value is negative, it means when the PV under setting value(PV ≤ -Setting value), the display will be setting value.

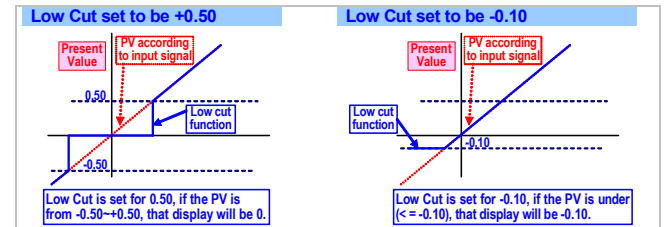

**Digital fine adjust:**

Users can get Fine Adjustment for Zero & Span of PV by front key of the meter, and "Just Key In" the value which user want to show in the current input signals. Especially, the [PuPto] & [PuSPn] are not only in zero & span of PV, but also any lower point for [PuPto] & higher point for [PuSPn]. The meter will be linearization for full scale. The adjustment can be clear in function [PSClr]

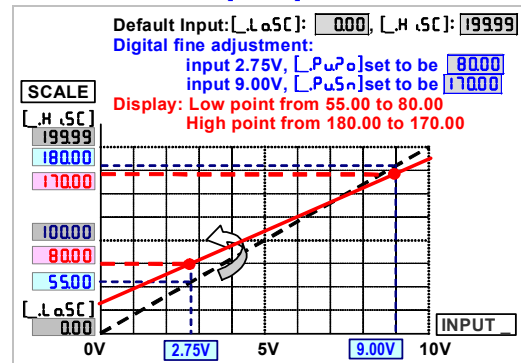


**Compensation factor:** Settable range: 0.001~9.999

The factor is compensation of display. There are some applications that are indirect detection. User can set the factor to compensate the display.

**Reading Stable Function**


**Average:**

Basically, the sampling rate of meter is 15cycles/sec. If the function set to be 3 times, It means the meter will update of display will be 5 times/sec.

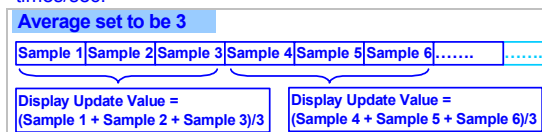

**Moving average:**

If the function to be set 3 times, the meter will update delay in first 3 samples, then it will update 15 times/sec continuously.

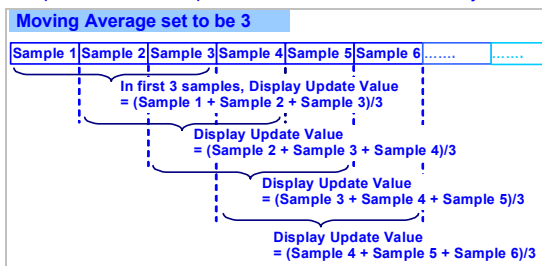

**Digital filter:**


The digital filter can reduce the magnetic noise in field.

**Control functions(option)**

**Relay energized mode:** Hi / Lo / Hi.HLd / Lo.HLd / do / Go-1.2 / Go-2.3 programmable

**Hi [Hi] (Fig.1-0):** Relay will be energized when PV > Set Point

**Lo [Lo] (Fig.1-0):** Relay will be energized when PV < Set Point

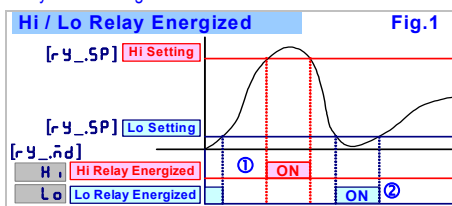

**Go-1.2 [Go-1.2]:**


This function is programmable in Relay 4 only. If the Relay 4 set to be Go function, the relay will compare with [r-y-SP] and [r-y2SP].

Go relay energized when the condition is [r-y-SP] (Hi) > PV > [r-y2SP] (Lo)

**Go-2.3 [Go-2.3]:**


This function is programmable in Relay 4 only. If the Relay 4 set to be Go function, the relay will compare with [r-y2SP] and [r-y3SP].

Go relay energized when the condition is [r-y2SP] (Hi) > PV > [r-y3SP] (Lo)

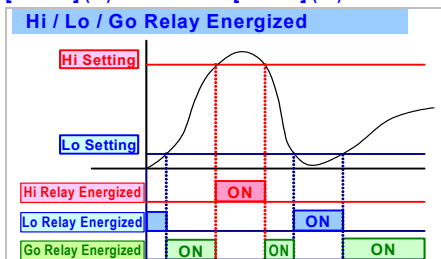

**Hi.HLd [Hi.HLd] (Lo.HLd [Lo.HLd]):**

When the PV is Higher (or lower) than set-point, the relay will be energized and latch until manual reset by from key in [User Level], [External Control Input(E.C.I.)] is closed or Press front down or up key to reset (UP Key or Down Key functions have been set to be "YES").

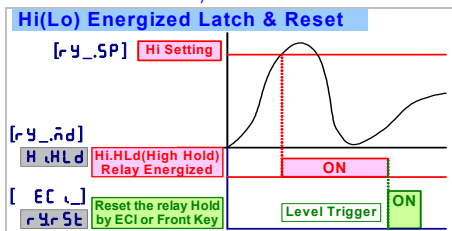


**DO function [do]:**

Energized by RS485 command of master. The function was designed to get remote control by RS485 command of master. The typical application is to control a switch in field from computer center as like as digital output(DO) of PLC.

**Energized Functions:**

Start delay / Energized & De-energized delay / Hysteresis

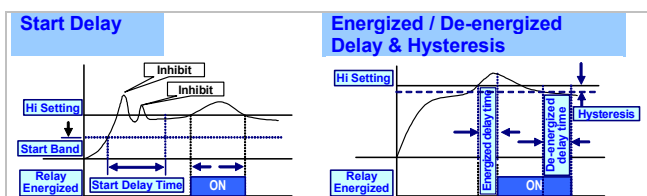

**External Control Inputs(ECI)**

The three external control inputs are individually programmable to perform specific meter control or display functions. All E.C.I. have been designed in level trigger actions. Please pay attention, the EC11 or EC12 input will be disable while UP or Down Key has been set to be "YES".


**Input mode:**

**Functions:**

**Relative PV [ELPu]:** The E.C.I. can be set to be [ELPu] function. When the E.C.I. is closed, the reading will show the differential value.


**PV Hold [uHLd]:** The E.C.I. can be set to be [uHLd] function. The display will be hold when the E.C.I. is closed, until the E.C.I. is to be open. Please refer to the below figure.

3 ECI points, Contact or open collect input, level trigger  
Relative PV / PV Hold / Reset Max or Mini. Hold / DI / Reset for Relay Energized latch; programmable

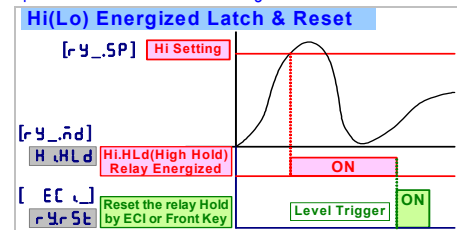

**Reset for Maximum or Minimum Hold:**

When the [dSPly] function in [input GROUP] selected [r-yrst] or [r-yrst], the display will show Maximum or Minimum value, and can be reset by the E.C.I. (close). Please refer to the figure as below.

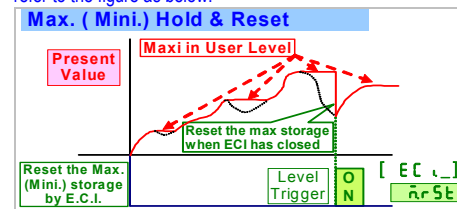

**DI [di]:**

The E.C.I can be set to be [di] function, when the meter building in RS485 port. It is easier to get remote monitoring a switch status through the meter as like as DI of PLC.

**Reset for Relay Energized Latch:**

If relay energized mode has set to be Energized latch [Hi.HLd] / [Lo.HLd], the E.C.I. can be set to be [r-yrst]. When the PV meets the condition of relay energizing, the relay will be energized and latch until the E.C.I. is closed.

**Debouncing time:**

The function is for avoiding noise signal to into the meter. And The basic period is 8mseconds. It means you set the number that has to multiple 8mseconds.

For example: [debnc] set to be 5, it means 5 x 8mseconds = 40mseconds

**Analogue output(option)**

Please specify the output type either an 0~10V or 4(0)~20mA in ordering. The programmable output low and high scaling can be based on various display values. Reverse slope output is possible by reversing point positions.

**Output range:**

Voltage: 0~5V / 0~10V / 1~5V programmable  
Current: 0~10mA / 0~20mA / 4~20mA programmable  
Output High / Low scale, output limit, fine adjustment


**Functions:**

**Output range high [RaHS]:**

To setting the Display value High to versus output range High(as like as 20mA in 4~20)

**Output range low [RaLS]:**


To setting the Display value Low to versus output range Low(as like as 4mA in 4~20)

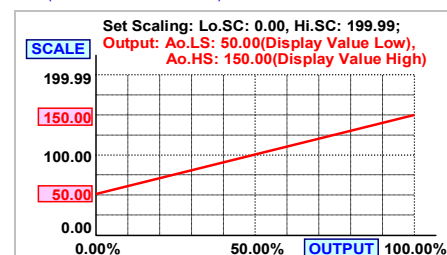

The range between [RaHS] and [RaLS] should be over 20% of span at least; otherwise, it will be got less resolution of analogue output.

**Output High Limit [AoLHt]:**

0.00~110.00% of output High User can set the high limit of output to avoid a damage of receiver or protection system.

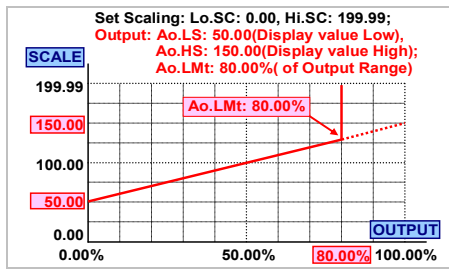


**Fine zero & span adjustment:**

Users can get Fine Adjustment of analogue output by front key of the meter. Please connect standard meter to the terminal of analogue output. To press the front key(up or down key) of meter to adjust and check the output.

- AO Zero [AoZro]:** Fine Zero Adjustment for Analog Output; Settable range: -38011~27524;
- AO Span [AoSPn]:** Fine Span Adjustment for Analog Output; Settable range: -38011~27524;


**RS 485 communication(option)**

The RS485's protocol is Modbus RTU mode, and baud rate up to 38400 bps. It's not only convenience to remote monitoring, display for reading and ECI status, but also for remote control in the case that doesn't have any DIO device in the field.

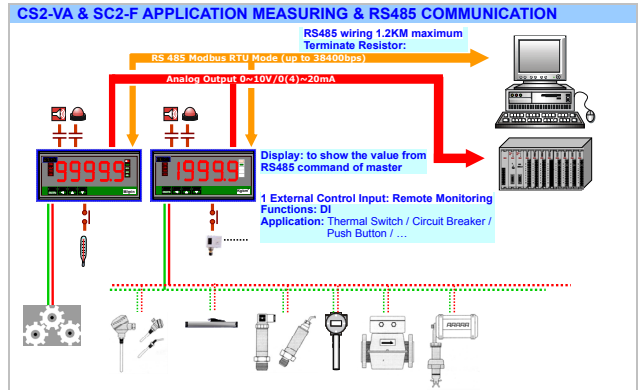

**Remote Display:**


The meter will show the value that received from RS485 command. In past, The meter normally receive 4~20mA or 0~10V from AO or digital output from BCD module of PLC .We support a new solution that PV shows the value from RS485 command of master so that can be **save cost and wiring** from PLC. When the [d5PLy] set to be RS485, it means, the PV screen will show the number from RS485 command & data. The data(number) will be same as PV that will compare with set-point, analogue output and ECI functions so that is to control analogue output, relay energized and so on.

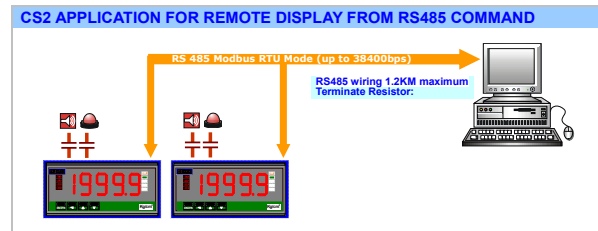

**■ ERROR MESSAGE**

BEFORE POWER ON, PLEASE CHECK THE SPECIFICATION AND CONNECTION AGAIN.		
SELF-DIAGNOSIS AND ERROR CODE:		
DISPLAY	DESCRIPTION	REMARK
ouFL	Display is positive-overflow (Signal is over display range)	(Please check the input signal)
-ouFL	Display is negative-overflow (Signal is under display range)	(Please check the input signal)
ouFL	ADC is positive-overflow (Signal is higher than input 120%)	(Please check the input signal)
-ouFL	ADC is negative-overflow (Signal is lower than input -120%)	(Please check the input signal)
EEP → FAiL	EEPROM occurs error	(Please send back to manufactory for repaired)
Ai.C.nG → Pu	Calibrating Input Signal do not process	(Please process Calibrating Input Signal)
Ai.C → FAiL	Calibrating Input Signal error	(Please check Calibrating Input Signal)
Ao.C.nG → Pu	Calibrating Output Signal do not process	(Please process Calibrating Output Signal)
Ao.C → FAiL	Calibrating Output Signal error	(Please check Calibrating Output Signal)

## FRONT PANEL:

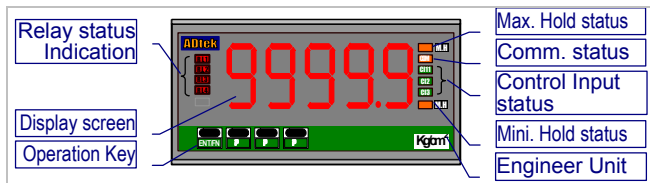

### Numeric Screens

0.8"(20.0mm) red high-brightness LED for 5 digital present value.

### I/O Status Indication

- **Relay Energized:** 4 square red LED
  - RL1** display when Relay 1 energized;
  - RL2** display when Relay 2 energized;
  - RL3** display when Relay 3 energized;
  - RL4** display when Relay 4 energized;
- **External Control Input Energized:** 3 square green LED
  - EC1** display when E.C.I. 1 close(dry contact)
  - EC2** display when E.C.I. 2 close(dry contact)
  - EC3** display when E.C.I. 3 close(dry contact)
- **RS485 Communication:** 1 square orange LED
  - COM** will flash when the meter is receive or send data, and **COM** flash quickly means the data transient quicker.
- **Max/Mini Hold indication:** 2 square orange LEDs
  - MLH** displayed: When the display function has been selected in Maximum or Minimum Hold function.
- **Stickers:**


Each meter has a sticker what are functions and engineer label enclosure.
- **Relay energized mode:** **HH Hi Lo LL DO**
- **E.C.I. functions mode:**
  - PV.H** PV.H(PV Hold) / **Tare** Tare / **DI** DI(Digital Input)
  - M.RS** M.RS(Maximum or Minimum Reset) /
  - R.RS** R.RS(Reset fo Relay Latch)
- **Engineer Label:** over 80 types.

- **Operating Key:** 4 keys for **ENTRN** Enter(Function) / **Shift**(Escape) / **Up** key / **Down** key

	Setting Status	Function Index
<b>Up key</b>	Increase number	Go back to previous function index
<b>Down key</b>	Decrease number	Go to next function index
<b>Shift key</b>	Shift the setting position	Go back to this function index, and abort the setting
<b>Enter/Fun key</b>	Setting Confirmed and save to EEPROM	From the function index to get into setting status

- **Pass Word **PCoDE**:** Settable range: 0000~9999; User has to key in the right pass word so that get into [ Programming Level ] . Otherwise, the meter will go back to measuring page. If user forgets the password, please contact with the service window.
- **Function Lock:** There are 4 levels programmable.
  - **None **nonE**:** no lock all.
  - **User Level **USER**:** User Level lock. User can get into User Level for checking but setting.
  - **Programming Level **EnG**:** Programming level lock. User can get into programming level for checking but setting.
  - **ALL **RLL**:** All lock. User can get into all level for checking but setting.
- **Front Key Function**
  - The **ENTRN** Key can be set to be the same function as the setting of EC11. Ex. The EC11 set to be **PuHLD** and the function **[E.1=UP]** set to be **YES** in **[ EC , GroUP ]**. When user presses **ENTRN** Key, the PV will hold as like as EC11 close.
  - The **Shift** Key can be set to be the same function as the setting of EC12. Ex. The EC12 set to be **ELPu** and the function **[E.2=dn]** set to be **YES** in **[ EC , GroUP ]**. When user presses **Shift** Key, the PV will show relative value as like as EC12 close.
- ▶ **If the front key function has been set, the terminal input for EC1 will be disabling.**

**OPERATING DIAGRAM** (The detail description of operation, Please refer to operating manual)

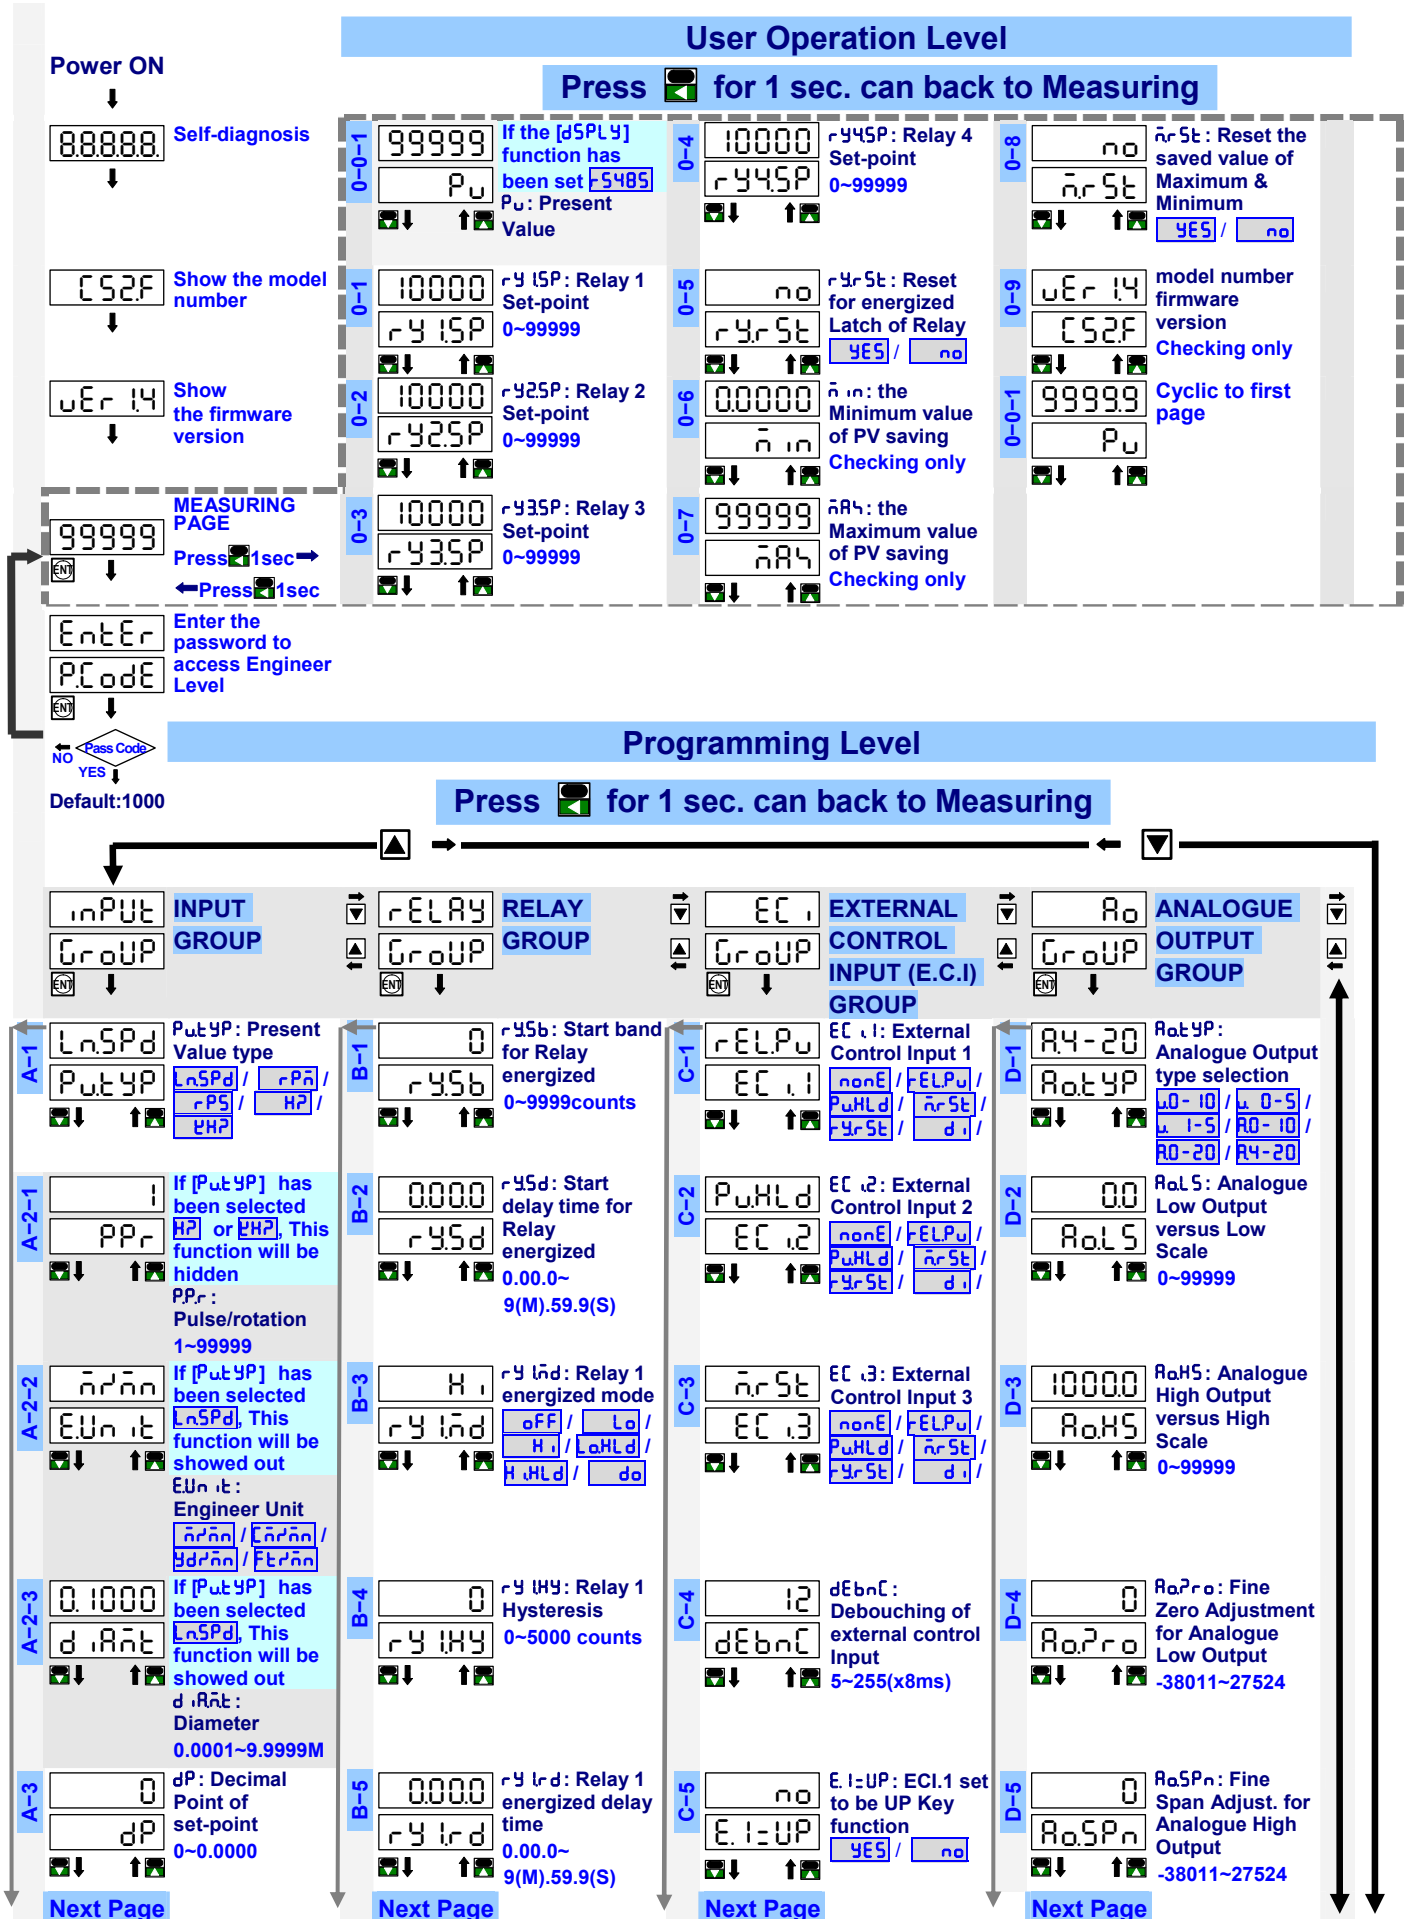

<p><b>A-4</b> 1000 FACt<sub>r</sub>: Compensation Factor 0.001~9.999</p> <p><b>A-5</b> 0 PuSP<sub>n</sub>: Fine High point Adjustment for PV display 0~+99999</p> <p><b>A-6</b> no SCCL<sub>r</sub>: Clear Fine Span Adjustment for PV display YES / no</p> <p><b>A-7</b> Pu dSPLY: Display Function Pu / h<sub>in</sub>Hd / h<sub>AR</sub>Hd / F5485</p> <p><b>A-8</b> 0 LoCUT: Low Cut Function 0~99999</p> <p><b>A-9</b> Auto t<sub>o</sub>n<sub>d</sub>: Input time out Mode Auto / h<sub>AR</sub>UL</p> <p><b>A-10</b> 00 If [Auto] has been selected h<sub>AR</sub>UL, This function will be showed out t<sub>o</sub>: How long will be time out 0.0~999.9sec</p> <p><b>A-11</b> Auto rAnGE: Reading Range with decimal point switching. Auto / SE<sub>n</sub> / h<sub>AR</sub>UL</p> <p><b>A-12</b> S AuG: Average update for PV 1(None)~99 times</p> <p><b>A-13</b> 1 hAuG: Moving Average update for PV 1(None)~10 times</p> <p><b>A-14</b> 0 dFILT: Digital filter 0(None)/1~99 times</p> <p><b>A-15</b> 0 PCode: Pass Code for enter Engineer Level 0000~9999</p> <p><b>A-16</b> none FLCL: Function Level Lock none / USE<sub>n</sub> / EnG / ALL</p>	<p><b>B-6</b> 0000 rYIFd: Relay 1 de-energized delay time 0.00.0~9(M).59.9(S)</p> <p><b>B-7</b> H rY2nd: Relay 2 energized mode oFF / Lo / H / LoHLd / H<sub>HLd</sub> / do</p> <p><b>B-8</b> 0 rY2HY: Relay 2 Hysteresis 0~5000 counts</p> <p><b>B-9</b> 0000 rY2rd: Relay 2 energized delay time 0.00.0~9(M).59.9(S)</p> <p><b>B-10</b> 0000 rY2Fd: Relay 2 de-energized delay time 0.00.0~9(M).59.9(S)</p> <p><b>B-11</b> H rY3nd: Relay 3 energized mode oFF / Lo / H / LoHLd / H<sub>HLd</sub> / do</p> <p><b>B-12</b> 0 rY3HY: Relay 3 Hysteresis 0~5000 counts</p> <p><b>B-13</b> 0000 rY3rd: Relay 3 energized delay time 0.00.0~9(M).59.9(S)</p> <p><b>B-14</b> 0000 rY3Fd: Relay 3 de-energized delay time 0.00.0~9(M).59.9(S)</p> <p><b>B-15</b> H rY4nd: Relay 4 energized mode oFF / Lo / H / LoHLd / H<sub>HLd</sub> / do / Co-12 / Co-34</p> <p><b>B-16</b> 0 rY4HY: Relay 4 Hysteresis 0~5000 counts</p> <p><b>B-17</b> 0000 rY4rd: Relay 4 energized delay time 0.00.0~9(M).59.9(S)</p> <p><b>B-18</b> 0000 rY4Fd: Relay 4 de-energized delay time 0.00.0~9(M).59.9(S)</p>	<p><b>C-6</b> no E2=dn: ECI.2 set to be Down Key function YES / no</p>	<p><b>D-6</b> none P5CLR: Zero &amp; Span Clear for Adjustment none / Ra<sub>2</sub>ro / RaSP<sub>n</sub> / botH</p> <p><b>D-7</b> 110000 RaLnt: Analog Output High Limit 0.00~110.00%</p>
---	---	--	--

**E-1** 1 AdRES: Device number of the meter  
1~255

**E-2** 9600 bAUD: Baud rate  
1200 / 2400 / 4800 / 9600 / 19200 / 38400

**E-3** nStb2 PrtY: Parity  
nStb1 / nStb2 / odd / EvEn

▶ Please refer to operating manual for detail description.